
Western Integrated Materials, Inc.

4 Sided Cased Opening Installation Instructions

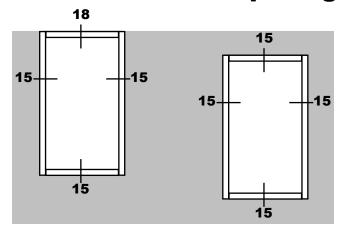


Cased Opening to Ceiling Grid

Cased Opening to Drywall

Special Note:

If installing to ceiling grid (detail 18) ensure that the ceiling grid is level and that the head channel is level and square before installing casing material.

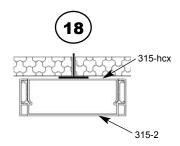


Special Note:


DO NOT SECURE FRAME UNTIL ALL PARTS ARE SET IN PLACE.

Cutting:

Measure rough opening and cut parts to size. Rough opening is 3/4" wider per side. Horizontals are cut to daylight opening dimensions.



- 2. Repeat with second jamb.
- 3. Set sill over wall.
- 4. Push head up over wall.
- 5. Level sill & secure in place.
- 6. Push one jamb up to sill and use a square for a 90° corner. Horizontal edge of jamb must line up with horizontal edge of clip. (Fig. 2) Clip must set flat in groove. (Fig. 3)
- 7. Repeat for second jamb.
- 8. Repeat for top of jambs to head, check for 90° at corners and secure in place. (Fig. 3)
- 9. Snap on trim.

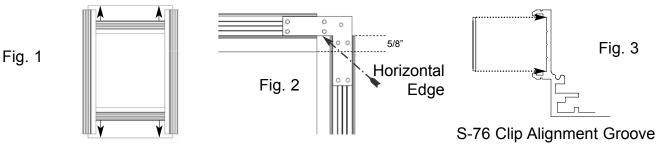

315-2